

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI 48390

No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adaptation to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: www.siproducts.com

SI Products
Service Center

1.888.856.6781
8:30a.m. – 7:00p.m. (EST)
M – F

Mail To: SI Products
Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI
48390

e-mail:
cservice@siproducts.com

THE
SHARPER
IMAGE

In-Home Professional Jewelry Steam Cleaner



Instruction Manual and
Warranty Information

CG-J100

1 year
limited warranty

THE SHARPER IMAGE ® name and logo are registered trademarks.
Marketed and distributed by SI Products under license. ©The Sharper Image.
All rights reserved.

IB-CGJ100

Bring the original brilliance back to your rings, earrings, bracelets and more.

Thank you for purchasing The Sharper Image® In-Home Professional Jewelry Steam Cleaner. This product, along with the entire The Sharper Image collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Restore the beauty of your most beloved jewelry with the amazing power of steam to produce professional cleaning results, by the single touch of a button, in the security and luxury of your own home.

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

Quick Start Guide

For optimum safety and performance, read the following safety instructions before using your unit

- Never overfill tank – Fill the cup (included with your unit) only to red Max Fill line. Overfilling will cause the unit to spew out hot water and steam.
- Unplug unit immediately after use. Unit is NEVER meant to remain on and plugged in.
- When steam stops flowing it is indication that the water tank is empty. Unit must remain OFF – unplugged – for a minimum of 30 minutes before refilling the tank. NEVER FILL THE TANK WHEN IT IS HOT.

NOW FOLLOW THESE STEP BY STEP INSTRUCTIONS -

1. Make sure unit is unplugged before filling with water.
2. Open the water reservoir lid.
3. Fill measuring water cup (included with unit) up to the red MAX FILL line with distilled or demineralized water and pour slowly into reservoir. DO NOT overfill.
4. Return water cup to its place on the base.
5. Screw down reservoir lid firmly.
6. Plug into 120V AC outlet.
7. The Ready Indicator Light will turn on and begin to flash. Unit will take approximately 3 minutes to pre-heat. When unit is heated and ready to use the light will stop flashing and become solid blue.
8. Apply steam with a gentle push to the Steam Activator Button. Plunging the button all the way down will create excessive steam and will quickly reduce the steam pressure.
9. For best results, bring jewelry up to nozzle tip where steam temperature is hottest. Never hold with bare fingers. Use mesh basket or long tweezers, both include with your jewelry cleaner.
10. Clean you jewelry in 10-20 second cycles, allowing 5-10 seconds between the cycles for pressure to build.
11. Wipe moisture off jewelry and unplug unit immediately after cleaning period.

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition.
- DO NOT operate another high wattage appliance in the same outlet or extension to avoid overload.

WARNING

- To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

- DO NOT touch the hot metal parts, hot water or steam to avoid burns.
- DO NOT touch the steam coming out of the steam jet nozzle.
- Move the appliance carefully, and always place the unit on a level surface.
- Allow the unit to cool down for at least 30 minutes before storing.
- ALWAYS disconnect the appliance from the outlet for at least 30 minutes BEFORE filling with water.
- Do not overfill tank - doing so can cause extreme output of steam. Use the Cup (included) and only use enough water to come up to the red MAX FILL LINE on the Cup.
- Please use distilled or de-mineralized water to prolong unit's life.
- Never overfill tank - using the measuring cup, fill only to the red Max Fill line.

SAVE THESE INSTRUCTIONS

Jewelry Cleaning Guide

The Sharper Image In-Home Professional Jewelry Steam Cleaner is primarily intended for your diamond jewelry, however rubies and sapphires can be steam cleaned safely as well. You can also steam clean any gold, platinum, or silver jewelry.

There are many stones that should not be steam cleaned. These include, but are not limited to, Opals, Emeralds, Tanzanite, Kunzite, Garnets, Peridot, Pearls, Coral, Turquoise or stones that may be glued-in or porous. When in doubt, always consult with your jeweler or gemologist.

Make sure that the settings are not loose before using any steam cleaner.

Usage Instructions

Filling Unit with Water:

1. Make sure the unit is unplugged before filling with water. If unit has been used previously, make sure it has been unplugged for a minimum of 30 minutes.
2. Open the water reservoir lid.
3. Fill measuring water cup (included with unit) up to the red MAX FILL line with distilled or demineralized water and pour slowly into reservoir.

DO NOT overfill.

4. Return water cup to its place on the base.
5. Screw down reservoir lid firmly.

Steam Cleaning Jewelry:

6. Plug into 120V AC outlet.

NOTE: To reduce the risk of electric shock, this appliance is equipped with a polarized plug (one blade wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

7. The Ready Indicator Light will turn on and begin to flash. Unit will take 2 – 3 minutes to pre-heat. When unit is heated and ready to use the Light will stop flashing and be solid blue.
8. Apply steam with a gentle push to the Steam Activator Button. Plunging the button all the way down will create excessive steam and will quickly reduce the steam pressure.
9. For best results, bring jewelry up to nozzle tip where steam temperature is hottest. Never hold with bare fingers. Use mesh basket or long tweezers, both include with your jewelry cleaner.
10. Clean you jewelry in 10-20 second cycles, allowing 5-10 seconds between the cycles for pressure to build.
11. Wipe moisture off jewelry and unplug unit immediately after cleaning period.

In-Home Professional Jewelry Steam Cleaner Features

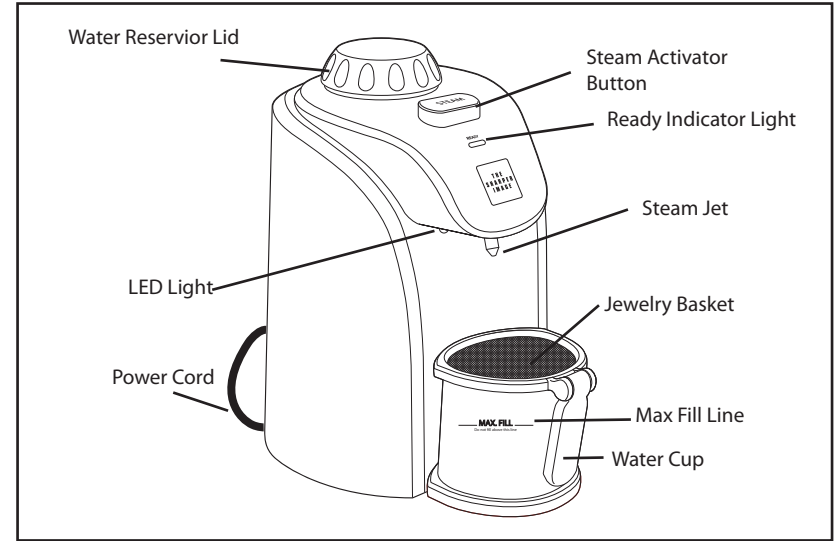


Fig. 1

Tips for Optimum Ring Cleaning:

To thoroughly clean rings, bring piece up to nozzle tip where steam temperature is hottest. Hold ring with tweezers (included) over basket, turn upside down and steam the underside first. Then turn right side up and run a steam cycle on the top side. You may find that intricate pieces, or those with multiple surfaces, will require several 10-20 second cycles to get all surface areas clean. We recommend running the piece through one cycle in the basket, and then use the tweezers to hold the item at the proper angle under the steam jet to get individual areas clean.

WARNING: Water and steam may cause burns. DO NOT open the reservoir lid when unit is powered on. DO NOT tip the unit in use. For your safety, wait until steam jet nozzle is steam-free before adding more water. Let jewelry and unit cool completely for at least 30 minutes before touching, to avoid burn injury.

Cleaning the Steam Cleaner Unit:

When finished cleaning jewelry, please use a 50/50 mixture of distilled water and vinegar and soak the water cup for 5 minutes. Then rinse.

NOTE: Do not immerse in any liquid to clean. Never use abrasive cleaners, brushes, gasoline, kerosene, glass / furniture polish or paint thinner to clean. Do not attempt to repair. There are no user serviceable parts. For service, send the unit to SI Products address listed in the warranty section.

Storing Unit:

1. Unplug the power cord.
2. Allow unit to cool down for at least 30 minutes.
3. Pour out the water from reservoir and let dry completely.
4. Place cleaner in its box or in a safe, dry, cool place. To avoid breakage, do not wrap the power cord around the unit. Do not hang the unit by the hand control cord.
5. Store all attachments and move the unit to storage.

Main Unit Specifications:

- Unit Weight: 3.7 lbs.
- Water Tank Capacity: 6.8 oz.
- Steam Output Cycle Time: 10-20 seconds
- Input Voltage: 120V 60Hz
- Output Power: 1100W

QUICK REFERENCE TROUBLESHOOTING

Problem	Possible Reason(s)	Solution
The unit is plugged in and turned on, but the ready indicator light does not flash and no steam comes out from steam jet.	Ready indicator light does not flash means unit has no electricity.	<ol style="list-style-type: none"> 1. Make sure unit is plugged in and the outlet is working. 2. If connection to outlet is good, but unit still is not working, please contact SI Products Customer Service.
The unit is plugged in and the indicator light is solid, but no steam comes out from steam jet.	<ol style="list-style-type: none"> 1. The water reservoir may be low on water or empty. 2. There may be an internal problem. 	<ol style="list-style-type: none"> 1. Unplug unit and allow to cool for at least 30 minutes. Empty residual water first and then refill using supplied fill cup. 2. Contact Customer Service.
The steam coming out of the unit looks dirty.	There is too much scale built up inside due to not using distilled or demineralized water.	<ol style="list-style-type: none"> 1. Please make sure you use distilled or demineralized water. 2. Use a 50/50 mixture of distilled water and vinegar and soak for 5 minutes to clean. Pour out cleaning solution before refilling with water.
Unit sprays out water at first, instead of steam.	There is too much water in the reservoir.	<ol style="list-style-type: none"> 1. Unplug the unit and allow to cool for at least 30 minutes. Empty tank. Using the supplied measuring cup, fill with water only to the red Max Fill line.